



TcpTUNNEL CAD

3

Installation Guide

Índice

1. SYSTEM REQUIREMENTS	3
2. PROGRAM INSTALLATION.....	4
3. LICENSE ACTIVATION	6

1. System requirements


The minimum system requirements for running **TcpTunnel CAD** are:

Processor	x86
Operating system	Windows 7, 8, 8.1 or 10 (32 or 64 bits)
RAM memory	4 GB
CAD	AutoCAD 2010 – 2021 ZWCAD 2018 – 2020


2. Program installation

To install **TcpTunnel CAD** on the device, the next steps must be followed:



- Extract the zip file containing the executable program. The name of this file has the format **date_tcptunnelcad_version.zip**.
- Run the installation file.
- Select the language. The available options are english and spanish. Then, click **OK** button.
- Select the installation folder and click **Next** button.

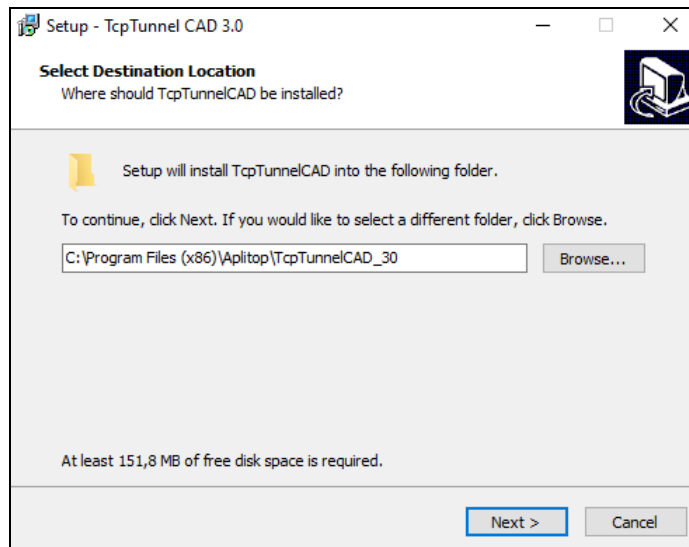

- Click **Install** button.

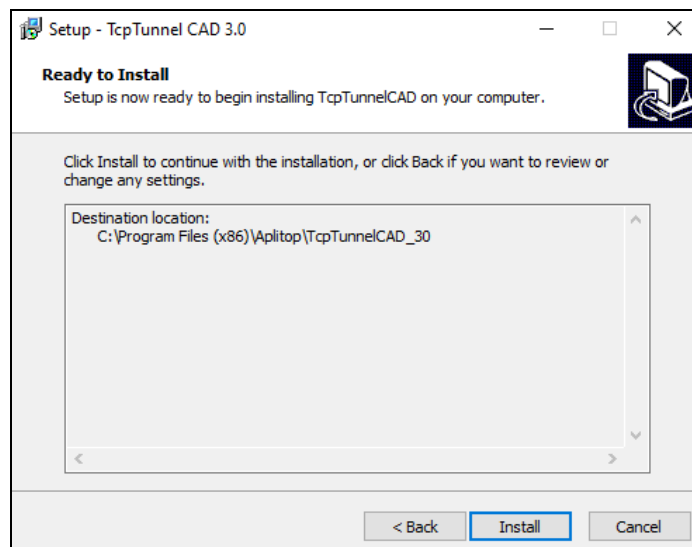

- Wait until installation finishes and click Esperar a que el programa termine la instalación y pulsar el botón **Finish**.

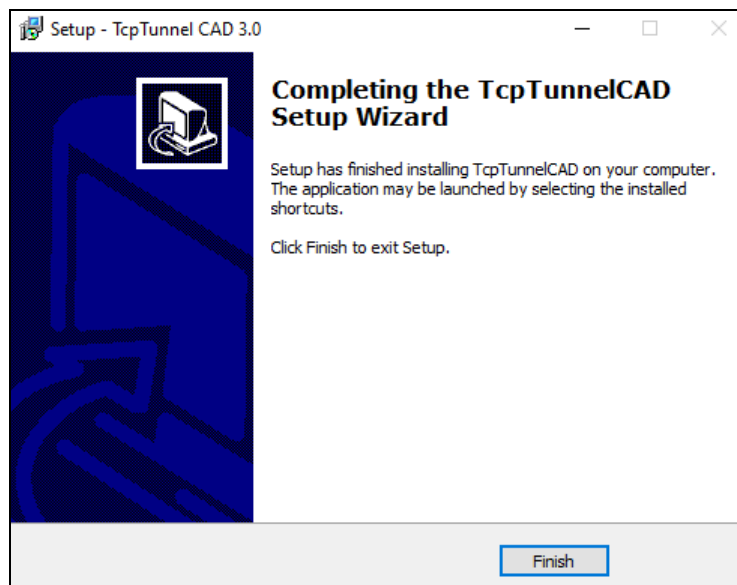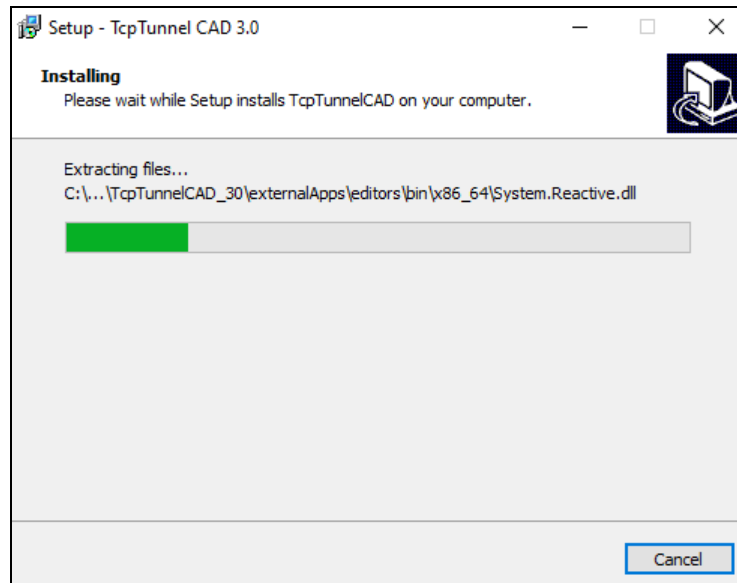


3. License activation

To activate the license for **TcpTunnel CAD**, it will be necessary Internet connection during the first execution of the program.

There are 3 types of license, **DEMO** (30 days), **FINAL** (permanent), **365** (annual). For these last two licenses, it will be necessary to enter an activation code of 20 and 16 characters, respectively.

The next steps must be followed:

- Run CAD program (**AutoCAD** or **ZWCAD**).
- Run **TcpTunnel > About** command.
- Enter the Email, the Country and enable the check box *Accept the Data Privacy Policy*.

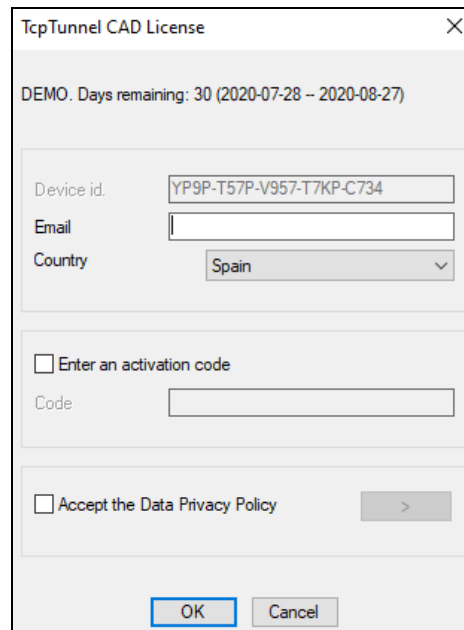

TcpTunnel CAD License

DEMO. Days remaining: 30 (2020-07-28 -- 2020-08-27)

Device id. YP9P-T57P-V957-T7KP-C734

Email

Country Spain

Enter an activation code

Code

Accept the Data Privacy Policy

OK Cancel

- For **FINAL** o **365** license, enable the option *Enter an activation code* and write, on *Code* edit box, the activation code supplied.
- Click OK button to start the activation process.